


GP-2

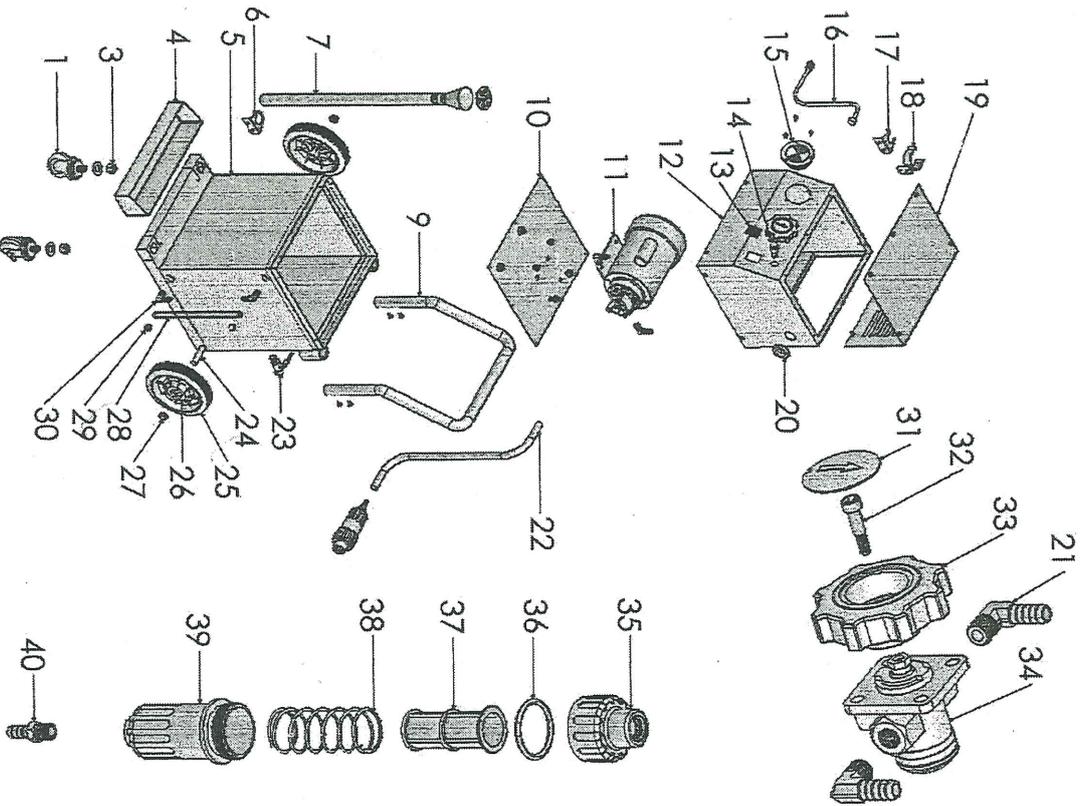

1	3H005005	2"×3/8牙活動煞車輪	21	3D025022	1/4PT外牙×3/8插心90°
2			22	201017	吸油膠管3/8"
3	906010	鍍鋅突緣帽3/8	23	3D007015	球頭3/8PT外牙×1/4PT外牙45°
4	3ML17167	機體工具盒	24	3M005012	二輪台車輪軸心
5	3ML17165	機體底座	25	3CM05001	6"塑框輪
6	3ML17236	機體-吸油導管座固定架	26	3H005025	培林13mm
7	3C021060	吸油導管做-大	27	3M016064	1/2輪蓋
8			28	3C027100	透明PU管1/2
9	3M032002	把手AF-70S	29	3F018015	CLIC 66-120
10	3ML17166	機體馬達板	30	3DG25040	1/4PT外牙×3/8插心90°
11	201088~91	馬達組(110/60)	31	3M002001	箭頭鐵片
12	3ML17072	機體面板	32	904037	鍍鋅大扁頭螺絲3/16×5/8
13	3H006011	照光押扣-黑	33	3AC02001	808三通旋鈕
14	201074	三通開關(含把手)	34	205056	
15	201093	聯承表	35	3CC32004	吸油把手蓋
16	3H006006	台插(超軟-耐油)	36	3G009064	O型環-38*4
17	3ML17236	吸油導管座固定架	37	3H015003	SP內網
18	3C021050	吸油把手座	38	3M013044	彈簧-吸油把手
19	3ML17164	機體上蓋	39	3CC32003	SP吸油把手機體
20	3G008034	線套	40	3D025043	1/4PT外牙

VACUUM OIL CHANGER

GP-2

OPERATING INSTRUCTIONS

Suction oil:


- A. Accord to each country`s voltage level.
- B. Please turn on the switch on suction oil.
- C. Can be used on normal.
- D. Keep the temperature of wasted-oil above 60 ° C in older to promptly suck oil out.
- E. Please use large sucking-oil tube if viscosity is high.
- F. Please use on only of lubrication oil.
- G. Please do not operate empty.

Drain oil:

- A. If the container full,wasted-oil must be drained out.
- B. Turn on the switch on drain oil.and it begin to drain oil.

ITEM DESCRIPTION

- 1. Power Switch
- 2. Power light
- 3. Waster can sight tube
- 4. Front brake wheel
- 5. Suction-oil tube
- 6. Pressure gauge
- 7. Suction-oil handle

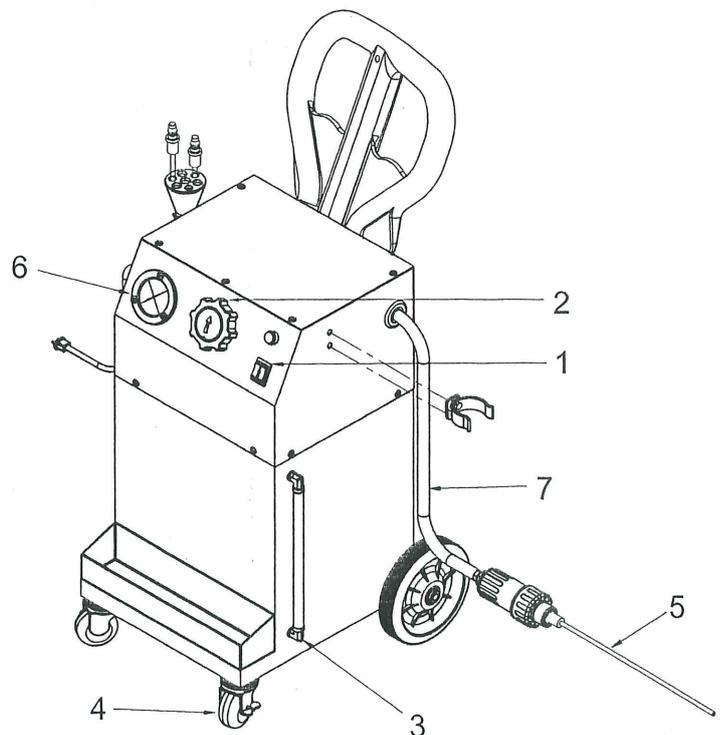

*Specifications are subject to change without notices.